


DensiEye – KeyWizard Version 2.11 Settings

Please use the below settings for the KeyWizard Version 2.11, when working with DensiEye.

Important: DensiEye works **ONLY** with KeyWizard Version 2.11. Other, even later versions do not support DensiEye.

Settings – SPM

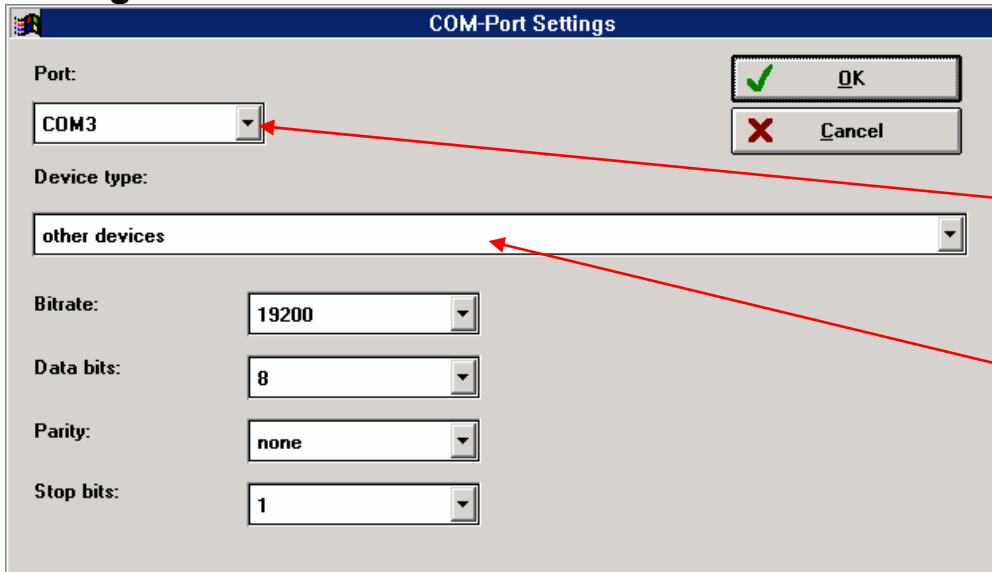


The 'COM-Port Settings' dialog box contains the following fields and controls:

- Port:** A dropdown menu set to 'COM3'. A red arrow points from this field to the text 'Port according to interface connection'.
- Device type:** A dropdown menu set to 'other devices'. A red arrow points from this field to the text 'Device type selection for DensiEye'.
- Bitrate:** A dropdown menu set to '19200'.
- Data bits:** A dropdown menu set to '8'.
- Parity:** A dropdown menu set to 'none'.
- Stop bits:** A dropdown menu set to '1'.
- Buttons:** 'OK' (with a green checkmark) and 'Cancel' (with a red X) buttons are located in the top right corner.

Port according to interface connection

Device type selection for DensiEye

Settings – Program

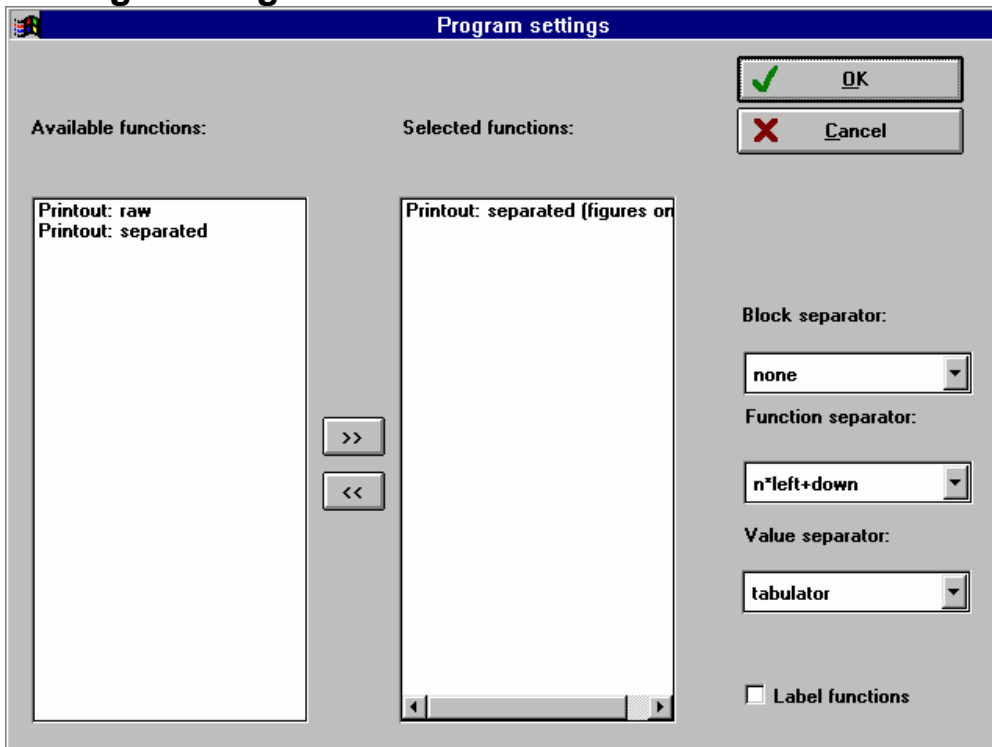

The 'Program settings' dialog box contains the following fields and controls:

- Available functions:** A list box containing 'Printout: raw' and 'Printout: separated'.
- Selected functions:** A list box containing 'Printout: separated (figures on...'. A scroll bar is visible at the bottom of this list.
- Buttons:** '>>' and '<<' buttons are located between the two list boxes.
- Block separator:** A dropdown menu set to 'none'.
- Function separator:** A dropdown menu set to 'n*left+down'.
- Value separator:** A dropdown menu set to 'tabulator'.
- Label functions:** An unchecked checkbox.
- Buttons:** 'OK' (with a green checkmark) and 'Cancel' (with a red X) buttons are located in the top right corner.